

Installation & Operation Manual

Models: ID-300, ID-400

All Models: 24V AC | Fuse: 500mA

IMPORTANT: READ THIS MANUAL CAREFULLY FOR PROPER INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS.

www.AirMadeBetter.com

3 YEAR WARRANTY

PLEASE REGISTER YOUR WARRANTY AT: www.airmadebetter.com/warranty-registration

LIMITED 3 YEAR WARRANTY

For warranty service, please contact your Independent HVAC or Electrical Contractor for the address of the nearest service center or email: customercare@airmadebetter.com

WHAT IS COVERED BY THIS WARRANTY

Advanced Air hereby warrants to the consumer that the product purchased under this warranty be free from defects in material and workmanship under normal use when installed, operated and maintained in accordance with the manufacturer's instructions. In the event of a product defect, failure or malfunction, Advanced Air will, for a period of three (3) years from the date of purchase, repair or replace at its discretion the defective, failed or malfunctioning product purchased under this Warranty. Installation and/or removal labor costs or charges are not covered under this warranty.



BiPolar ID-300



BiPolar ID-400

INSTALLATION AND MAINTENANCE REQUIREMENTS

This warranty is expressly conditioned upon proper installation, operation, cleaning and maintenance, all in accordance with this Installation and Operation Manual. Failure to meet any of these requirements will void this warranty. Servicing of your Advanced Air BiPolar Ionization product by parties other than our authorized representatives and/or using parts other than genuine Advanced Air parts will also void this warranty.

WHAT IS NOT COVERED BY THIS WARRANTY

Ordinary wear and tear shall not be considered a defect in workmanship or material. These warranties do not apply for loss or damage caused by accident, shipping, fire, abuse, misuse, improper installation, leaking, modification, misapplication, or by any repairs other than those provided by our authorized Service Center. This warranty is non-transferable.

EXCLUSION OF OTHER WARRANTIES AND CONDITIONS

EXCEPT AS PROVIDED HEREIN, WE MAKE NO REPRESENTATION OR WARRANTY OF ANY KIND. ALL OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

LIMITATION OF LIABILITY FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES

WE SHALL NOT IN ANY CASE BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM BREACH OF EXPRESSED OR IMPLIED WARRANTIES, CONDITIONS, GUARANTEES OR REPRESENTATIONS, BREACH OF CONTRACT, NEGLIGENCE, INSTALLATION OR ANY OTHER LEGAL THEORY. Such excluded damages include, but are not limited to, loss of profits or revenue, and loss of the use of the products, and any loss caused by leaks or other water damage.

FOR U.S. APPLICATION ONLY

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on warranties, or on remedies for breach. In such states, the above limitations may not apply to you.

FOR CANADIAN APPLICATION ONLY

Exclusion of Subsequent Owners: Except as otherwise required by applicable legislation, this warranty is not transferable. This warranty gives you specific legal rights and you may also have other rights which vary from province to province. Some provinces and territories do not allow limitations on warranties, or on remedies for breach. In such provinces or territories, the above limitations may not apply to you. If any provision of this warranty or part thereof is held by a court of competent jurisdiction to be invalid, illegal, or unenforceable, the validity, legality and enforceability of the remaining provisions or parts thereof will not in any way be affected or impaired within the jurisdiction of that court. This entire warranty shall continue to be valid, legal and enforceable in any jurisdiction where a similar determination has not been made.

SERVICE

For service questions or inquiries please contact us at: customercare@airmadebetter.com

MAINTENANCE

Advanced Air BiPolar Ionization Systems are designed for continuous operation without requiring replacement parts. It is recommended that the device is mounted downstream from the filter to ensure the carbon fibre brushes remain as clean as possible.

Cleaning Interval: Advanced Air BiPolar Ionizers are designed for low maintenance. The devices should be checked semi-annually to confirm the brushes are clean for maximum performance. If the carbon fibre brushes get dirty, please follow the instructions below for proper cleaning and maintenance.

- 1. Disconnect the power to the BiPolar unit.
- 2. Remove any dust from the brushes with either compressed air or gently brushing the emitter brushes with a small soft bristle brush.
- 3. Reconnect the power to the BiPolar unit.

SAFETY WARNINGS

DISCLAIMER

Manufacturer is not responsible for any issues, injuries or damages caused as a result of:

- Misuse or improper application of the product.
- Placement of the product in a location or in a manner which is not contained in this manual.
- Improper installation or products installed in a manner which does not follow the installation instructions contained in this manual.
- Any installation not performed by a licenced Mechanical, HVAC or Electrical contractor.
- Use of replacement parts not manufactured or supplied by Advanced Air.

CAUTION

RISK OF ELECTRIC SHOCK! Disconnect power at breaker or fuse panel before installing this device or performing any service/replacement of parts. Also, disconnect power to the unit before performing any service, maintenance or parts replacement.

*Always follow OHSA electrical lockout safety requirements to prevent accidental exposure to electrical energy during installation or service/repair.


WARNING

- Keep all wires away from the carbon fibre brushes, allowing at least one inch (2") of spacing between the carbon fibre brushes and anything metal or grounded.
- Never touch the ion needles or carbon brushes while operating.
- Only install this product in a dry location away from water or moisture. Only install this product indoors on a metal surface in an HVAC handler or duct, and away from extreme heat or cold.

MECHANICAL INSTALLATION

WARNING: Do not connect to power before installation is complete.

- Mount the BiPolar Ionization unit downstream of the filter and before the cooling/heating coil. For best results avoid locations directly downstream of the cooling/heating coil or humidifier.
- Mount the BiPolar unit at or near the fan inlet on a metal surface in the air handler or internal wall duct ensuring the airstream flows over the two brushes simultaneously. See Figure 1
- 3. Attach using the magnet provided to a metal surface. If mounting the unit on the fan housing, ensure the unit is secured well from fan vibration. If mounting using screws, (not included) in applications where there is high velocity air streams or excessive vibration, use self tapping short length screws, so they do not impair fan operation or cause damage to equipment.
- The tips of the carbon brushes should be at least 2" away from any metallic or grounded object.

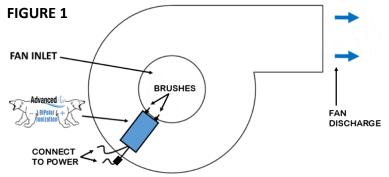


Hardware Provided: 1-BiPolar Ionization unit | 1-Securing Magnet | 1 - 500mA Fuse. Hardware Required by Installer: Electrical Connectors | Mounting Screws (if needed)

ELECTRICAL INSTALLATION

WARNING: Do not connect to power before installation is complete. Always disconnect power from the unit before handling the ionizer.

- 1. All field wiring to be done in accordance with NEC and Authorities Having Jurisdiction (AHJ).
- Connect power to the BiPolar Ionizer using appropriate voltage of 24V AC. See Figure 2.
- 3. Wires: RED: Positive / Hot; BLACK: Negative
- 4. For best results, interlock the BiPolar Ionizer with fan power.
- 5. Keep power wires away from tips of the units brushes.
- ${\bf 6. \ Apply \ power \ to \ unit. \ Green \ light \ indicates \ the \ ionizer \ is \ functioning \ properly.}$

FIGURE 2

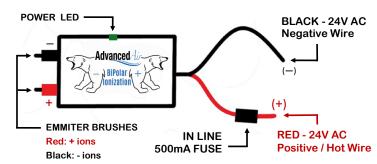

OPERATION

- 1. When power is supplied to the ionizer, the green power/operation light will illuminate indicating the ionizer is active and working.
- 2. The BiPolar ionizer is self balancing and does not require any adjustments.



Phoenix, AZ USA Phone: 602-975-8396

Email: customercare@airmadebetter.com

www.AirMadeBetter.com

SPECIFICATIONS

Model Voltage Current Fuse Airflow Capacity ID-200 24VAC 10mA 500mA 2000cfm

© 2022 Advanced Air

CONFORMS TO:

- UL STANDARD 867
- UL STANDARD 2998
- CSA STANDARD
- C22.2 No 187-M1986
 RoHS Directive (EU) 2015/863
 - Notis birective (LO) 2015/







EPA Est. Reg. No.

99880-CHN-1



Page 2 of 2