
## **TUNGSTEN** ELECTRIC

WIRING DIAGRAM

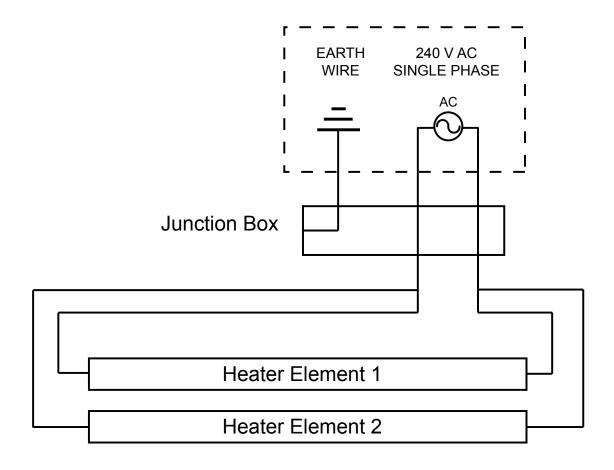

# STANDARD INSTALLATION 4000W & 6000W MODELS





#### **WARNING**

240 V AC Single Phase Heater must be permanently installed and hard wired by an authorised/licenced person.

#### **AUS Head Office**

10 Phiney Place, Ingleburn Sydney, NSW 2565 Australia T: +61 2 9426 5222 W: bromic.com/heating-au E: info@bromic.com.au

#### **USA Head Office**

18 Technology Drive, Suite 121 Irvine, CA 92618 T: 1800 301 1293 W: bromic.com/heating E: info@bromic.com

### **Europe Office**

Weinauallee 19
02763 Zittau Germany
T: +49 358 3518 9885
W: bromic.com/heating-de
E: info@bromic.de