
| Sur | nyo | aze |
|-----|-------|-----|
| • | DECOR | _ |

rurchase Date: / / / Order/Customer Reference Number:

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at https://tiny.cc/SunnydazeWarranty

If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at https://tiny.cc/SunnydazeContact

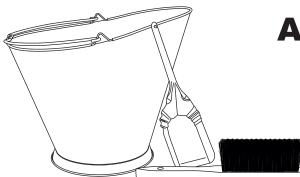

ASH BUCKET WITH BRUSH
AND SHOVEL

CFT-697

Read and follow all information carefully before using this product.

Save this manual for future reference.

🚹 SAFETY STATEMENTS & WARNINGS 🛕

- Do not allow children to play with or around fireplace accessories.
- Do not use the brush to sweep live coals (embers).
- Use heat-resistant fireplace gloves when using the fireplace shovel. Treat all ashes as if they are hot.
- When possible, wait at least 24 hours after a fire before removing ashes.
- Avoid adding live embers to the ash bucket.
- Do not add anything combustible to the ash bucket.
- When in use, store the ash bucket in a well ventilated location as ashes may contain live coals (embers) which emit carbon monoxide.
- When in use, do not place the ash bucket near anything combustible.
- Allow ash bucket to sit for at least 3 days before disposing of ashes. Dispose of ashes in accordance with local laws and regulations.
- Do not attempt to clean any accessory while it is hot.

Any modification to the product or failure to follow recommended care will void the product warranty.

CARE & MAINTENANCE

Do not attempt to clean components while they are hot.

Clean the bucket and shovel by wiping them with a soft cloth.

Clean the brush by rinsing with clean water. Do not soak the brush as doing so will may damage the handle and bristles. Allow the brush to thoroughly air dry before using; wet bristles will trap ashes.

Do not use abrasive cleaners as they may cause parts to tarnish or rust.

If you experience issues with the product or it was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of the page.

Please have the item number and order information ready to expedite response time.

⚠WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.