

INSTALLATION INSTRUCTIONS AND OWNER'S MANUAL

INSTALLER:

Leave this manual with the appliance.

CONSUMER:

Retain this manual for future reference.

A WARNING

If the information in these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- WHAT TO DO IF YOU SMELL GAS
 - Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Leave the building immediately.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

LOG SET MODELS GAS-FIRED
LS(3236,42)FF-1
For Use With
DVCP(32,36,42)-3 Fireplaces LISTED



NOTICE: Ceramic fiber logs may differ in appearance from those shown in this manual.

A WARNING

If not installed, operated and maintained in accordance with the manufacturer's instructions, this product could expose you to substances in fuel or from fuel combustion which can cause death or serious illness.



We suggest that our gas hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute® (NFI) as NFI Gas Specialists.

LS(3236) LOG SET IDENTIFICATION

INDEX LETTER & DESCRIPTION	PART NUMBER	FRONT VIEW	TOP VIEW
(A) Rear Log	37698		
(B) Left Front Log	37699		
(C) Right Front Log	37700	24.700	
(D) Rear Crossover Log	37701		
(E) Right Crossover Log	37702		
(F) Left Small Log	37703		

Page 2 37708-1-0617

LS(42) LOG SET IDENTIFICATION

INDEX LETTER & DESCRIPTION	PART NUMBER	FRONT VIEW	TOP VIEW
(A) Rear Log	37541		
(B) Left Front Log	37542		
(C) Right Front Log	37545		
(D) Rear Crossover Log	37546		
(E) Right Crossover Log	37559	A CONTRACTOR OF THE PARTY OF TH	
(F) Left Small Log	37549		
(G) Left Crossover Log	37550		

LOG INSTALLATION PREPARATION

LOG PLACEMENT

The positioning of logs is critical to safe and clean operation of this fireplace. Sooting and other problems may result if the logs are not properly and firmly positioned in the fireplace.

BEFORE BEGINNING THE INSTALLATION:

- Remove barrier screen and glass door on fireplace using instructions from the fireplace manual.
- Remove the burner cover. Using a screwdriver push up pins
 7 and 8 for both model applications. See Figures 2 and 3.
- 3. Place burner cover into fireplace.
- Place logs in position as shown in Figure 1 and the following pages. DO NOT force holes into the logs. Install using the holes located in each log.

NOTICE: Log Index Letter (G) only used on LS42. See Figure 1.

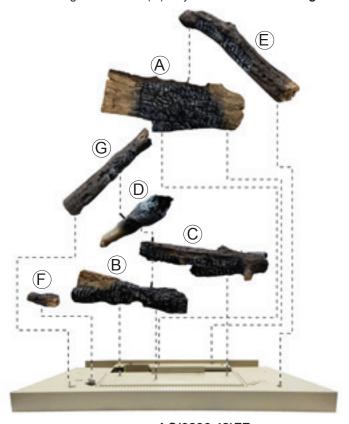


Figure 1 - LS(3236,42)FF

A WARNING

Apply loose material (embers) per instruction manual. DO NOT apply extra material not supplied with this appliance. All previously applied loose material (embers) must be removed prior to reapplication. Do not cover large ports with loose material (embers).

EMBER AND COAL PLACEMENT

After placing logs into position, place dime-sized pieces of glowing embers over the burner surface. A single layer is sufficient; do not over-apply. **See Figure 4.**

PIN LOCATIONS FOR THE LS3236FF

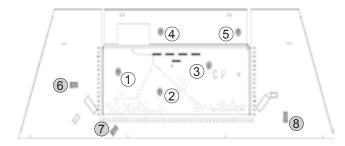


Figure 2

PIN LOCATIONS FOR THE LS42FF

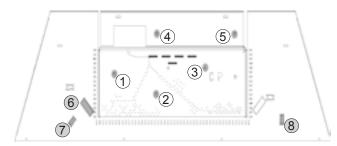


Figure 3

GLOWING EMBERS (place in shaded area only)

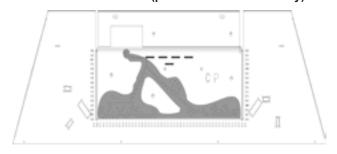


Figure 4

COAL PLACEMENT (place in shaded area only)

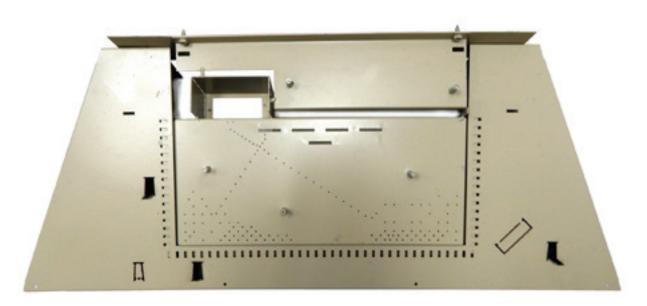


Figure 5

NOTICE: For step by step instructions with images for model **LS3236FF** (See Pages 5-12). For step by step instructions with images for model **LS42FF** (See Pages 13-21).

Page 4 37708-1-0617

STEP 1. Push up pins 6, 7 and 8 as shown in **Figure 2**. Replace burner cover inside fireplace.




Top View




Front View

STEP 2. Place (Log Index Letter B) onto pins 1 and 2 on the burner. See image below.

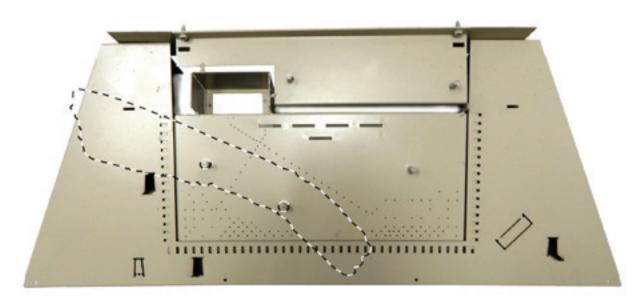

Top View

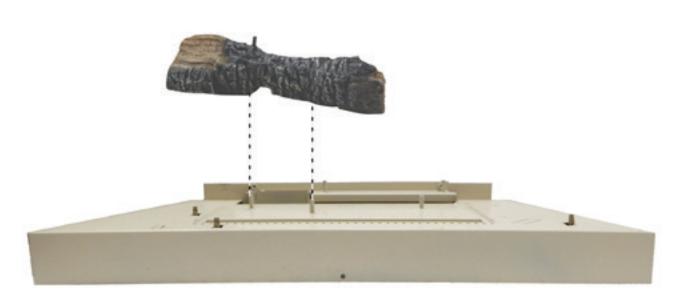


Front View

Page 6 37708-1-0617

STEP 3. Place (Log Index Letter F) onto pins 6 and 8 on the burner. See image below.



Top View

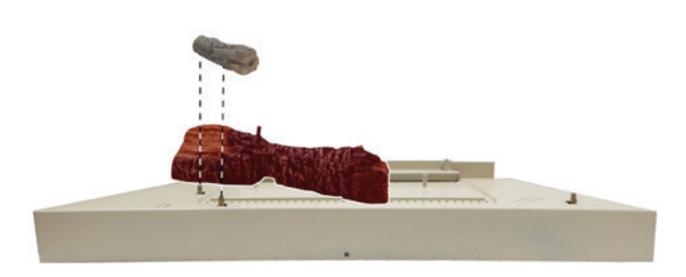


Front View

STEP 4. Place (Log Index Letter C) onto pin 3 and pin on log B. See image below.




Top View

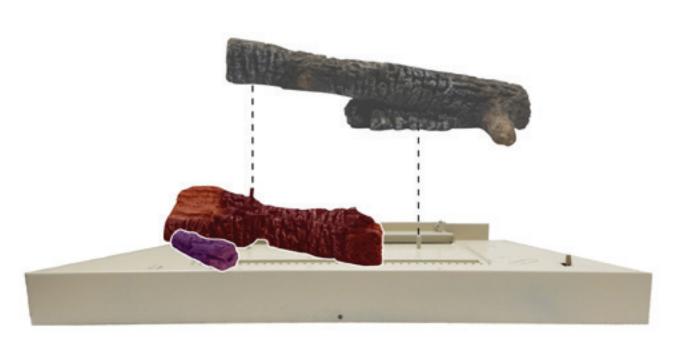


Front View

STEP 5. Place (Log Index Letter D) onto pin on log C and to left side of pilot. See image below.

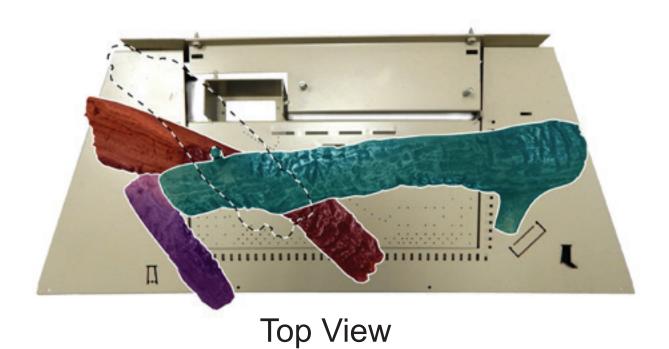

Front View


STEP 6. Place (Log Index Letter A) onto pins 4 and 5 on the log support bracket. See image below.

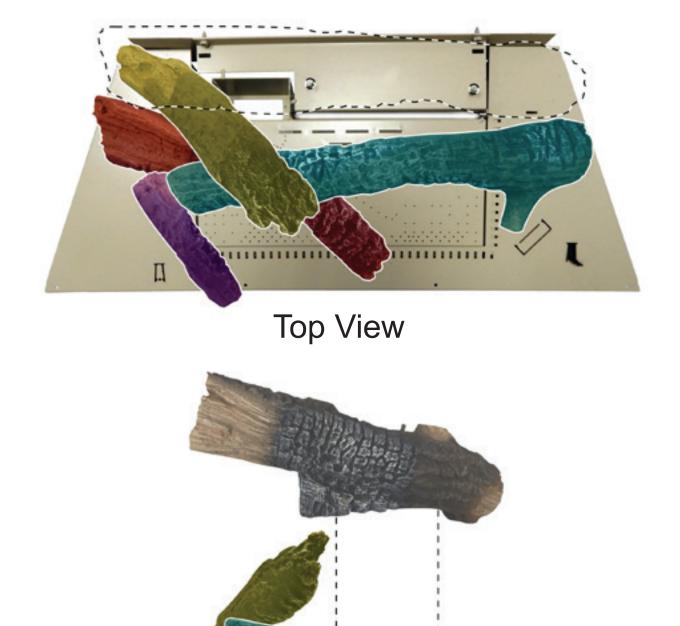


Front View

Page 10 37708-1-0617

STEP 7. Place (Log Index Letter E) onto pin 9 and the pin on log A. See image below.

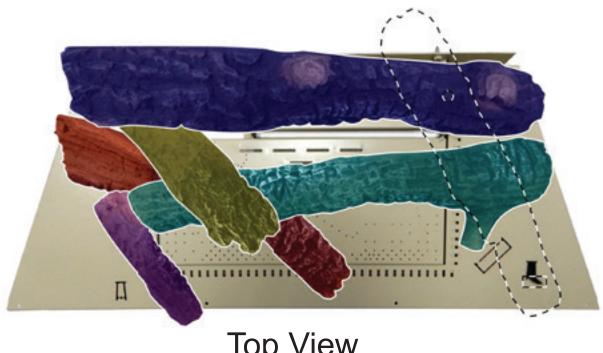


Top View

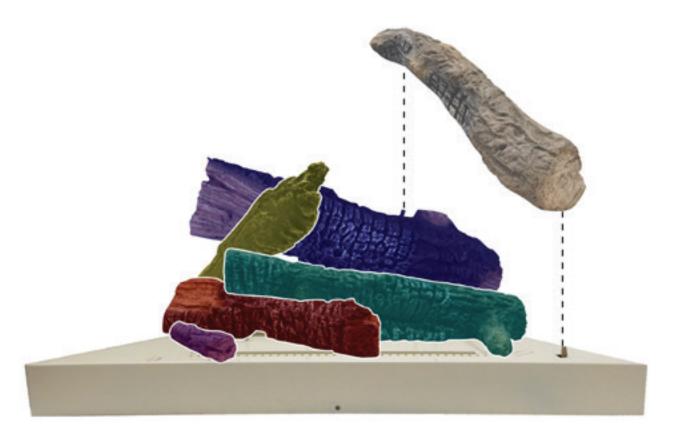

Front View

STEP 8. This completes the placement of the logs. Place Glowing Embers in locations indicated in **Figure 4** along the circular ports. Use dime-shaped size embers. Place ember sticks and coal in area shown in **Figure 5**. Replace

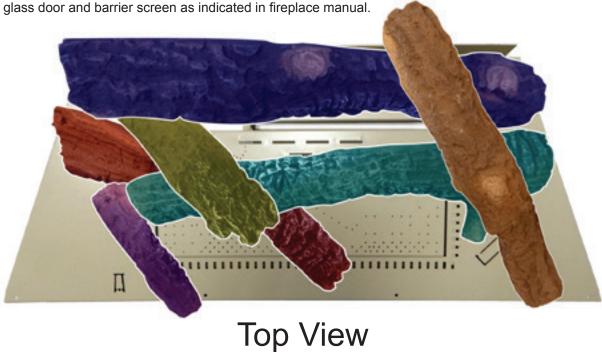





Front View

Page 12 37708-1-0617

STEP 1. Push up pins 6, 7 and 8 as shown in Figure 3. Replace burner cover inside fireplace.

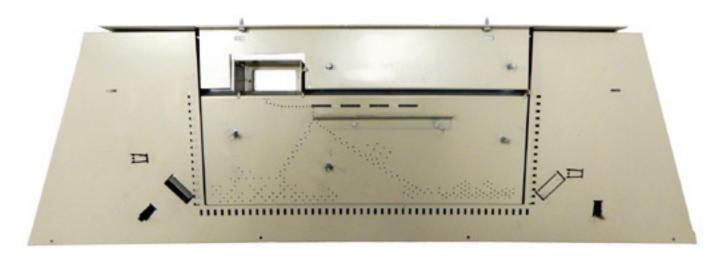


Top View

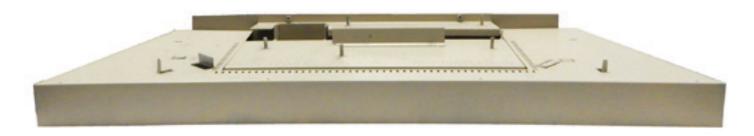


Front View

STEP 2. Place (Log Index Letter B) onto pins 1 and 2 on the burner. See image below.

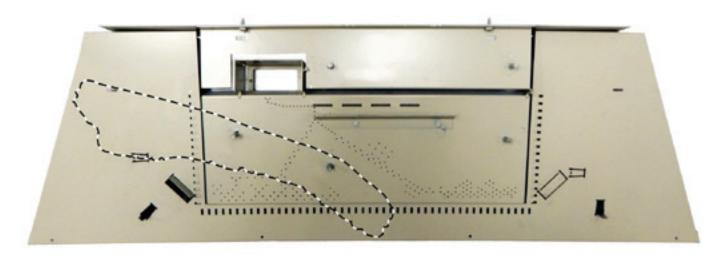

Top View

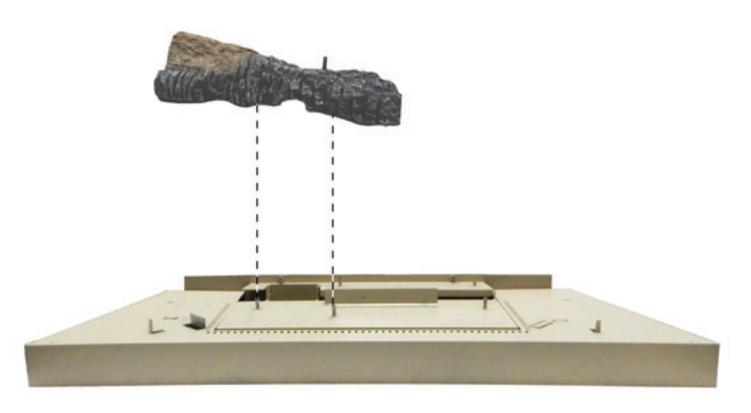

Front View

Page 14 37708-1-0617

STEP 3. Place (Log Index Letter F) onto pin 6 on the burner. See image below.




Top View




Front View

STEP 4. Place (Log Index Letter C) onto pin 3 and pin on log B. See image below.

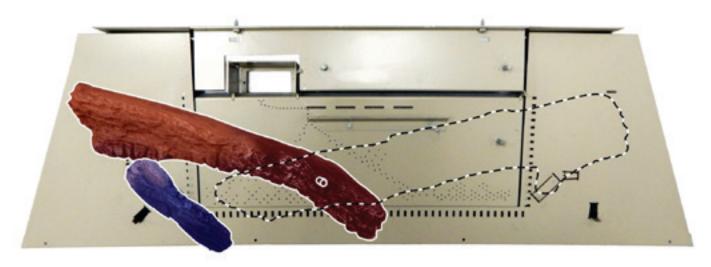


Top View

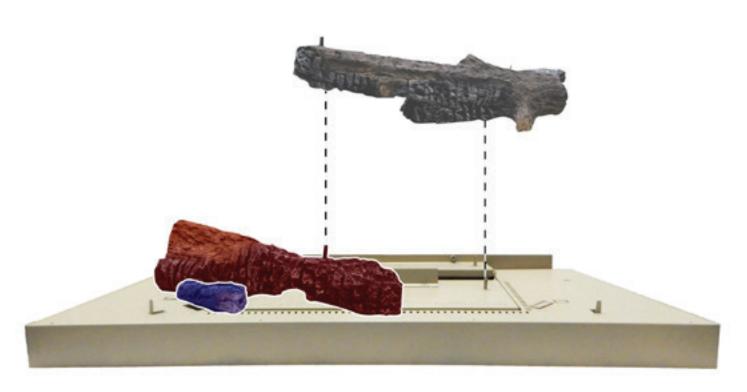


Front View

Page 16 37708-1-0617

STEP 5. Place (Log Index Letter D) onto pin on log C and to left side of pilot. See image below.

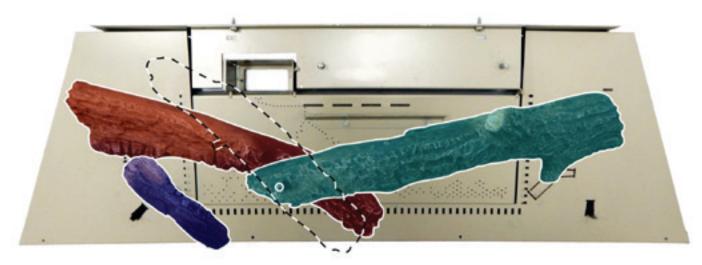


Top View

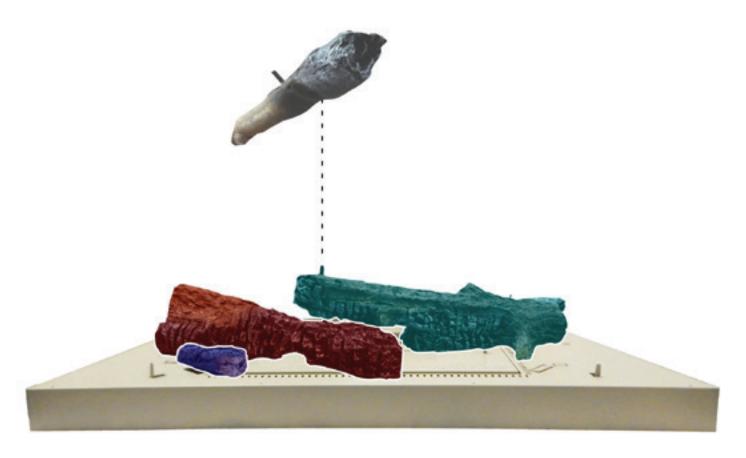

Front View

STEP 6. Place (Log Index Letter G) onto pin 7 and on to the side of log D. See image below.

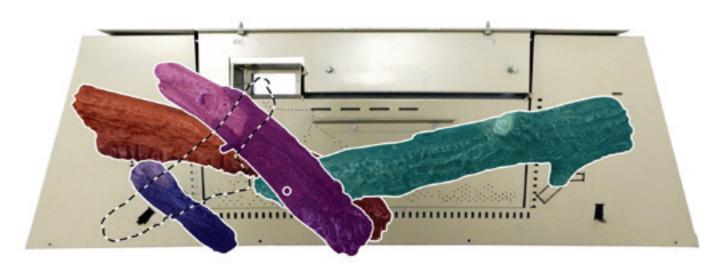


Top View



Front View

Page 18 37708-1-0617

STEP 7. Place (Log Index Letter A) onto pins 4 and 5 on the log support bracket. See image below.

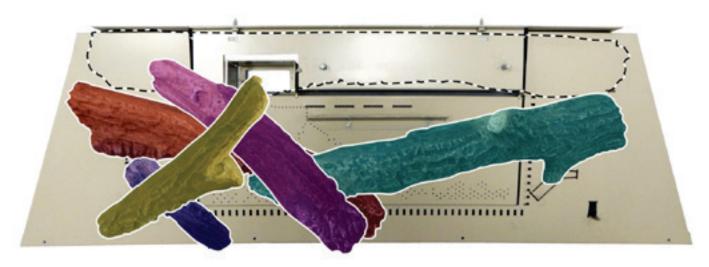


Top View



Front View

STEP 8. Place (Log Index Letter E) onto pin 8 and the pin on log A. See image below.

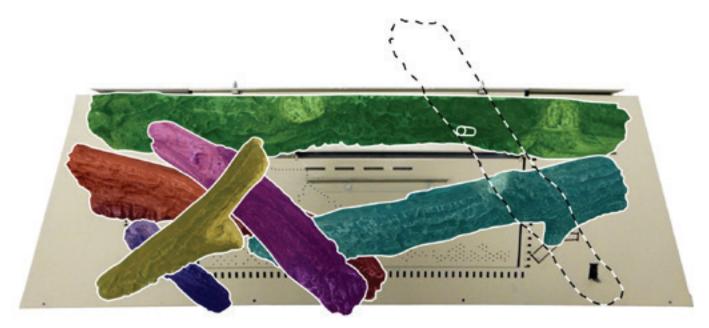


Top View



Front View

Page 20 37708-1-0617

STEP 9. This completes the placement of the logs. Place Glowing Embers in locations indicated in **Figure 4** along the circular ports. Use dime-shaped size embers. Place ember sticks and coal in area shown in **Figure 5**. Replace

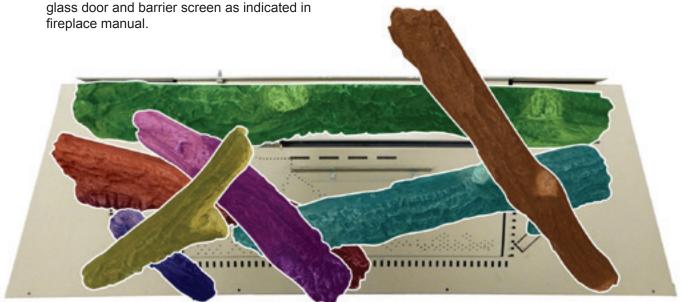

Top View



Front View

APPLIANCE SERVICE HISTORY Date **Dealer Name Service Technician Name Service Performed/Notes**

Page 22 37708-1-0617

MASTER PARTS DISTRIBUTOR LIST

To Order Parts Under Warranty, please contact your local Empire dealer. See the dealer locator at www.empirecomfort. com. To provide warranty service, your dealer will need your name and address, purchase date and serial number, and the nature of the problem with the unit.

To Order Parts After the Warranty Period, please contact your dealer or one of the Master Parts Distributors listed below. This list changes from time to time. For the current list, please click on the Master Parts button at www.empirecomfort.com. Please note: Master Parts Distributors are independent businesses that stock the most commonly ordered Original Equipment repair parts for Heaters, Grills, and Fireplaces manufactured by Empire Comfort Systems Inc.

Dey Distributing

1401 Willow Lake Boulevard Vadnais Heights, MN 55101

Phone: 651-490-9191 **Toll Free:** 800-397-1339

Website: www.deydistributing.com Parts: Heater, Hearth and Grills

F. W. Webb Company

200 Locust Street Hartford, CT 06114

Phone: 860-722-2433 Toll Free: 800-243-9360 Fax: 860-293-0479

Toll Free Fax: 800-274-2004

Websites: www.fwwebb.com & www.victormfg.com

Parts: Heater, Hearth and Grills

East Coast Energy Products

10 East Route 36 West Long Branch, NJ 07764

Phone: 732-870-8809 Toll Free: 800-755-8809 Fax: 732-870-8811

Website: www.eastcoastenergy.com **Parts: Heater, Hearth and Grills**

HOW TO ORDER REPAIR PARTS

Parts Not Under Warranty

Parts can be ordered through your Service Person, Dealer, or a Master Parts Distributor. See this page for the Master Parts Distributors list. For best results, the **service person or dealer** should order parts through the distributor. Parts can be shipped directly to the **service person/dealer**.

Warranty Parts

Warranty parts will need a proof of purchase and can be ordered by your Service Person or Dealer. Proof of purchase is **required** for warranty parts.

All parts listed in the Parts List have a Part Number. When ordering parts, first obtain the Model Number and Serial Number from the name plate on your equipment. Then determine the Part Number (**not** the Index Number) and the Description of each part from the following illustration and part list. Be sure to give all this information . . .

Appliance Model Number	Part Description			
Appliance Serial Number	Part Number			
Type of Gas (Propane or Natural)				
Do not order bolts, screws, washers or nuts. They are standard hardware items and can be purchased at any local hardware store.				
Shipments contingent upon strikes, fires and all causes beyond our control.				



Empire Comfort Systems Inc. Belleville, IL

If you have a general question about our products, please e-mail us at info@empirecomfort.com.

If you have a service or repair question, please contact your dealer.

SINCE 1932

www.empirecomfort.com

Page 24 37708-1-0617