

Assembly & Operating Instructions

24" and 30" High Velocity Oscillating Wall Mount Fans

CAUTION:

Read and follow all instructions before operating fan. Do not use if any part is damaged or missing.

WARNING:

To reduce the risk of fire or electrical shock, **DO NOT** use this fan with any solid-state speed control device. This appliance has a 3-prong grounded plug that must be inserted into a matching outlet. To reduce the risk of electrical shock, this grounding plug must not be cut off the plug. Where a two-prong wall outlet is encountered, it must be replaced: contact a qualified electrician. **DO NOT** attempt to defeat this safety feature. Use your fan only with adequate wiring that is up to code. Connect to properly grounded outlets only.

NOTE: Installation of this equipment should be performed by a qualified person. We do not warrant any damage caused by improper installation.

This fan is Suitable for Use in Wet Locations When connected to a GFCI Protected Branch Circuit. Never use this fan in a wet location without a GFCI Protected Branch Circuit!

RULES FOR SAFE OPERATION:

- Always unplug unit for cleaning.
- Always unplug unit when not in use.
- Do not place foreign objects through guard into the blade.
- Do not operate without fan guards properly locked.
- Do not use this fan with an extension cord.
- Do not place fan or any parts near an open flame, cooking or other heating appliance.
- Do not operate this unit with a damaged cord or plug or if this unit has been dropped or damaged.

UNPACK YOUR FAN AND CHECK THE CONTENTS

- Motor Assembly & Hardware Package
- Front/ Rear Grille & Blade
- Wall Mounting Pipe & Base
- Owner's Manual & Hardware Package

MOUNTING BASE ON A WOOD FRAMED WALL

1. Located a wall stud that is secure and solid enough to hold the weight of the fan assembly. Carefully located and mark the center of wall stud. If you do not have a solid structural framing member at that location, then you must provide an adequate alternative for mounting the fan.
2. Place mounting bracket (1) against the wall centered with the centerline of the wall stud and 4 holes.

3. Drill 4 holes on the wall and secure bracket to wall using 3 lag screws (3) provided. If mounting on a concrete wall, be sure to locate a structurally solid and

secure location to hold the weight of the fan assembly and use suitable concrete anchors (not provided) to mount the base to the wall.



MOUNTING PIPE & BASE ASSEMBLY

1. Put one end of the pipe (4) into the slot in the base.
2. Carefully insert the position knob (2) and tighten it to hold the pipe.

WALL MOUNT BRACKET/ MOTOR ASSEMBLY

1. Remove the 2 bolts (9), washers (6) and nuts (5) from the motor (4) package; Secure left and right motor mounting brackets to the bracket holder.
2. Align the holes on the pipe with the holes in the motor mounting brackets on the motor assembly.
3. Insert the bolts (9) and replace the washers and nuts removed in step 1.
4. Adjust the tilt to the desired position and tighten the pivot knob (8) to set the angle.
5. Tighten the bolt and nut.

CAUTION: BE SURE TO SECURE THE KNOB.

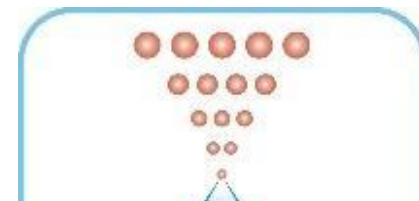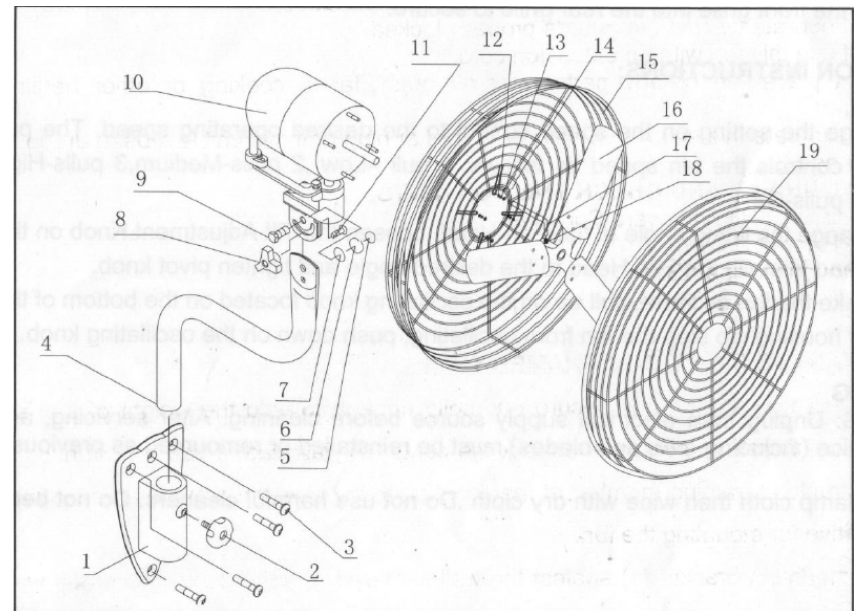

OWNERS MANUAL

READ AND SAVE THESE INSTRUCTIONS

OSCILLATING OUTDOOR WALL FANS

24" and 30" High Velocity Oscillating Wall Mount Fans



MOTOR / REAR GRILLE & BLADE ASSEMBLY

1. Removed the 4 nuts, spring washers and flat washers (12,13,14) from the bolts

around the motor shaft.

2. Carefully slide the rear grille (15) over the bolts.
3. Secure with 10 flat washers, spring washers and nuts removed in Step 1.
4. Carefully slide the blade assembly (16) over the shaft and align the square head locking nut (18) provided with the slots on the shaft of the motor.
5. Tighten the blade assembly (16) with the square head locking bolt using the square head driver (17) (not provided with the fan)

NOTE: the square head driver type

CAUTION: The blades are balanced, DO NOT ALTER THE ANGLE OF THE BLADES.

FRONT GRILLE ASSEMBLY

1. Hang front grille (19) on top rib of rear grille (15) by utilizing the hook.
2. Snap the front grille into the rear grille to secure.

OPERATIONS INSTRUCTION:

1. Change the setting on the speeds control to the desired operating speed. The pull chain controls the fan speed as follows: 1 pull - Low, 2 pulls-Medium, 3 pulls-High and 4 pulls-Off.
2. To change the tilting angle of the Fan Head, Loosen the Tilt Adjustment Knob on the fan head joint, tilt the Fan Head to the desired angle and tighten pivot knob.
3. To make the fan oscillate, pull up on the oscillating knob located on the bottom of the motor housing. To stop the fan from oscillating, push down on the oscillating knob.

CLEANING

1. **WARNING:** Unplug from electrical supply source before cleaning. After servicing, any safety device (including grills and blades) must be reinstalled or remounted as previously installed.
2. Use soft damp cloth then wipe with a dry cloth. Do not use harmful cleaners. Do not bend the blades.