

# 3-PANEL FIREPLACE SCREEN GWC-494

Read and follow all information carefully before using this product. Save this manual for future reference.



## **WARNING**

- Do not allow children to play with or around the screen.
- Do not attempt to clean the screen while it is hot.
- When the screen is in use, do not touch with bare hands.
- Make sure the screen is large enough to completely cover the fireplace opening.
- Use heat-resistant fireplace gloves when moving or adjusting the screen.

## **CAUTION**

- Make sure the opened angles of the side panels are between 90° and 120°.

## **CARE & MAINTENANCE**

Do not attempt to clean the screen while they are hot.

Lay the screen flat on the floor and wipe with a soft cloth.

To store, fold the screen together, place it in the box and secure.

Do not use abrasive cleaners as they may cause parts to tarnish or rust.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## **WARNING:**

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.