

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>
 If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

RUSTIC CHIMINEA WITH RAIN CAP RCM-504







Read the assembly instructions carefully and follow the care instructions.
Save this document for future reference.

Assemble on a soft, clean surface to avoid scratching or damaging the finish.



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.



| NO. | PARTS | QTY. |
|-----|---|------|
| A |  Main Body | 1 |
| B |  Flue Base | 1 |
| C |  Flue | 1 |
| D |  Leg | 3 |
| E |  Bolt | 12 |
| F |  Hex Key | 1 |

NOTE: The rust patina finish is a result of the alloy steel being exposed to water and oxygen. The color may continue to change over time. Help limit color change and further oxidization by covering or storing the fire pit when not in use.

Because rust will flake away from the unit, use a drop cloth during assembly. The rust flakes may cause staining, especially if it comes in contact with water; avoid contact with clothing.

WARNING

CHOKING HAZARD — This item contains small parts that can be swallowed by children. Keep children away during assembly.


WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

ASSEMBLY

STEP 1


A: 1
D: 3
E: 6

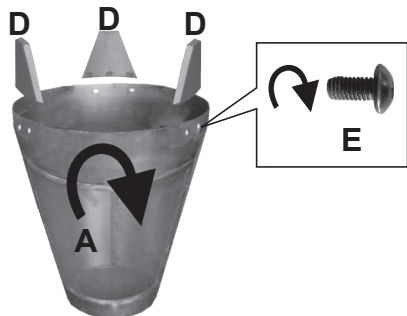

Place Main Body (A) upside down. Secure Leg (D) to the inside of the main body using two Bolts (E). Repeat to secure the remaining two legs.

STEP 2


B: 1
E: 3

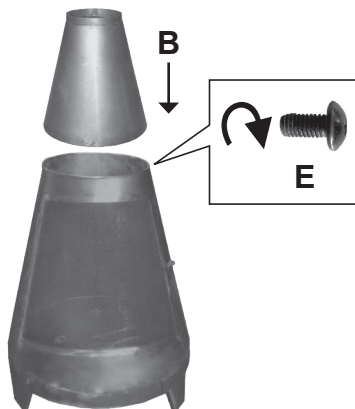

Flip unit upright and place Flue Base (B) onto the main body. Align the mounting holes and secure using three Bolts (E).

STEP 3

C: 1
E: 3

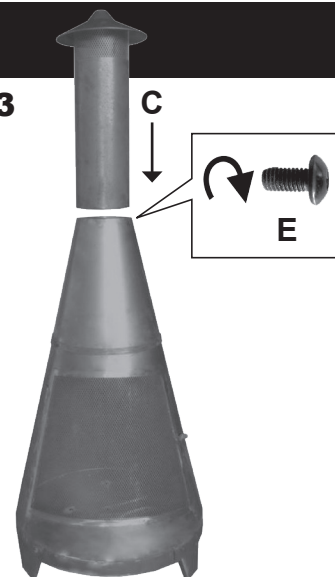

Place Flue (C) onto the flue base and firmly secure using three Bolts (E).

CARING FOR YOUR CHIMINEA

Clean Regularly & Safely: Cleaning after each use is recommended. Never allow ash to accumulate in the body or the flue. Make sure the fire has completely died down and the metal is completely cool before removing ashes and cleaning the flue.

Avoid Accelerants & Plastic: Never use accelerants to start a fire; this is dangerous and can damage your chiminea. Never use plastic materials in or near this unit. Burning plastic releases toxic fumes & the residue is very difficult to remove from the unit.

Use on a Safe Surface: Always use chimineas on a smooth, non-combustible surface; do not use on a wood deck or other combustible surfaces like dry grass, leaves, mulch, etc. Do not use chimineas near combustible structures such as vinyl or wood siding. Take care never to drop your chiminea, as any breakage could cause serious damage and costly repairs.

Cover and Store: Cover and store in a dry location when not in use. If you only cover the chiminea, be sure it is not exposed to water. The manufacturer is not liable for damage caused by exposure to weather conditions.

Extinguish: Let fires die down gradually, do not use water to put out a fire as this may cause the metal to crack as a result of the sudden drop in temperature.

! SAFETY STATEMENTS & WARNINGS !

- For outdoor use only. Never use this product in an enclosed area.
- Always follow local laws and regulations when using wood-burning fire pits and chimineas.
- Exercise the same care and precautions as you would with an open fire.
- Keep unit a safe distance away from buildings, balconies, or overhangs when in use.
- Use on a level, non-combustible surface.
- Do not use on or near combustible surfaces or structures such as wood decks, vinyl or wood siding, dry leaves or grass, mulch, etc.
- Keep away from all combustible materials, including gasoline and other flammable liquids and vapors.
- Never use accelerants such as, but not limited to, gasoline, alcohol, paint thinners, kerosene. Accelerants may cause serious injury or product damage.
- The chiminea becomes very hot when in use; let it completely cool before cleaning or moving.
- Keep out of reach of children.
- Do not overfill or use this unit to burn leaves or trash.
- Avoid using any chiminea during dry or windy conditions.
- Supervise children and pets when the chiminea is in use.
- DO NOT USE CHEMICAL-BASED CLEANERS as this may damage the product and/or ignite a flame during the next use.
- Never leave unit unattended while hot or in use. Extinguish the fire properly before leaving. Use a fire extinguisher or a bucket of sand to smother the fire if necessary. Do not use water to extinguish hot fires or embers as this may cause serious injury and may damage the unit.
- Ashes can remain hot for a long time after the fire is extinguished. Dispose of cold ashes properly.
- Ensure the unit is completely cool before covering, failure to do so will damage the cover (not included) and the unit.

Any modification to the product or failure to follow recommended care will void the product warranty.