
3-PIECE FRAME KIT INSTALLATION INSTRUCTIONS


INSTRUCTIONS MUST BE LEFT WITH THE OWNER FOR FUTURE REFERENCE AFTER INSTALLATION.


INSTALLING OPTIONAL FRAME KIT

Note: If applicable, remove plastic covering from sheet metal before installation.


- 1. Remove two (2) screws from the right side of the firebox opening.
- 2. Align clearance holes in the right frame with screw holes in fireplace.
- 3. Replace the two (2) screws removed earlier.
 - **Note:** For stainless steel trim kits frame inserts should be installed between side trim and firebox. See chart on pages 2 and 3 for installation information.
- 4. Repeat steps 1–3 to install left side of frame
- 5. Slide top trim flange behind the flat portion of side trim. Be sure the flat portion of the top trim is in front of flat portion of side trim. See Figure 1.
- 6. Rear lip of top trim will nest behind the back portion of the side trim to keep trim flush to finished material. See Figure 2.
- 7. Installation of optional frame kit is completed.

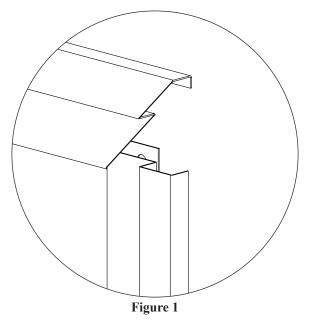


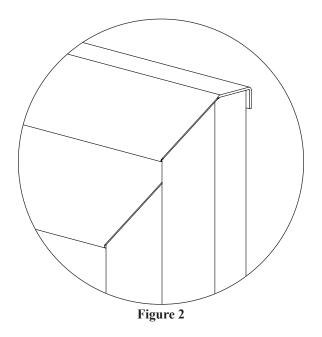

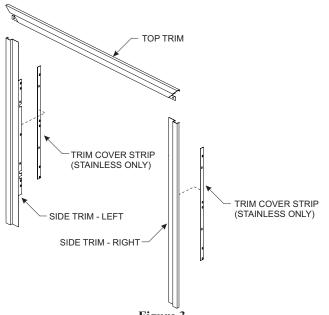



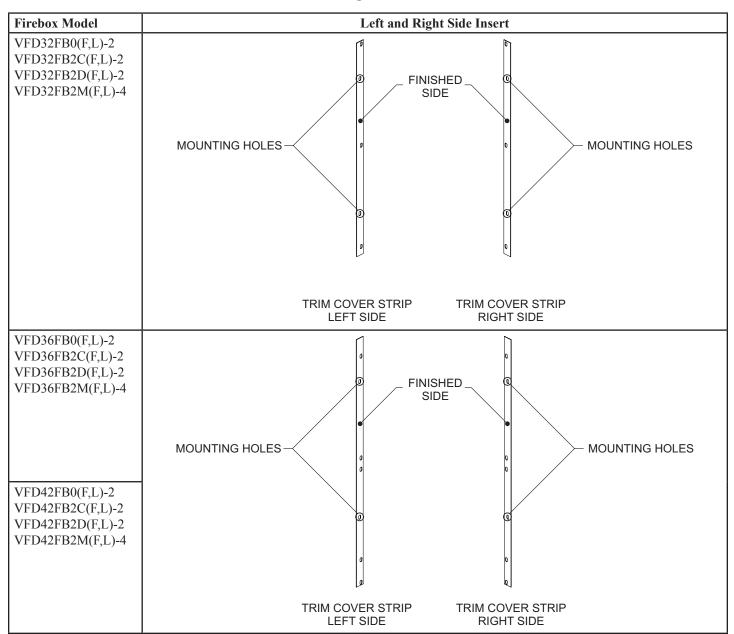

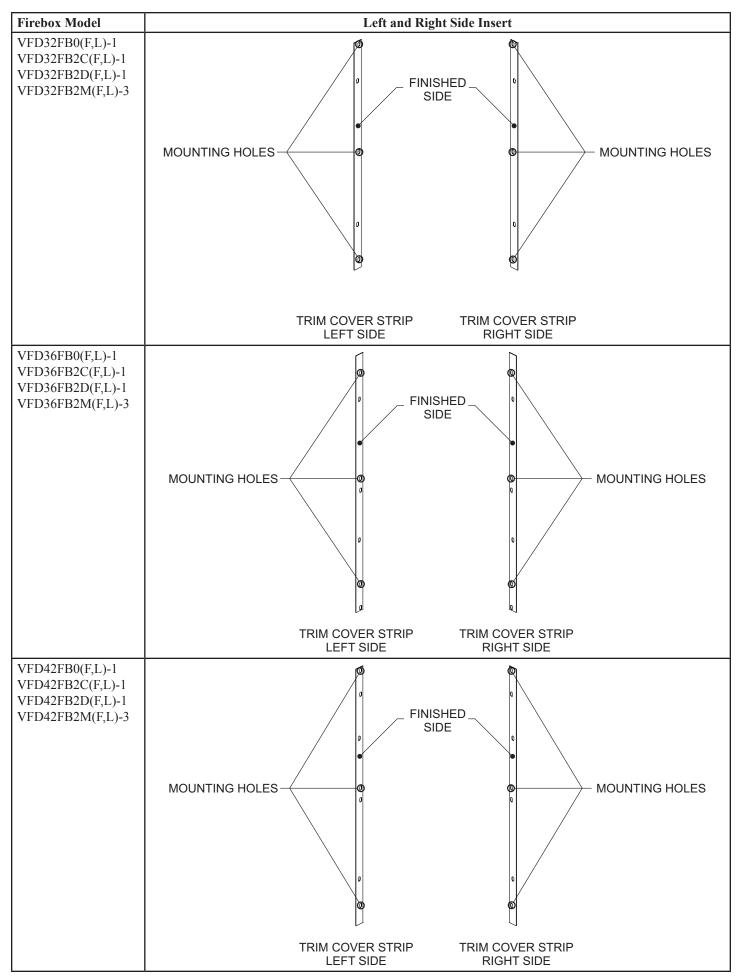



Empire Comfort Systems Inc. 918 Freeburg Ave. Belleville, IL 62220

If you have a general question about our products, please e-mail us at info@empirecomfort.com. If you have a service or repair question, please contact your dealer.

www.empirecomfort.com