
Assembly/Installation Guide

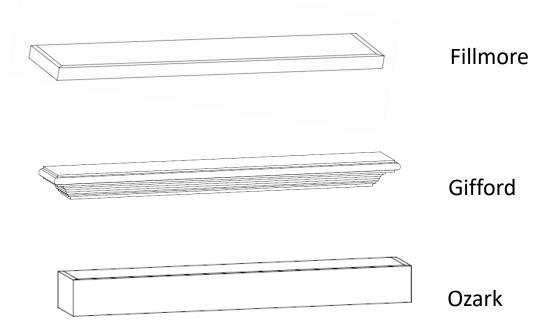

PLEASE READ

These instructions apply only to the shelf of the fireplace.

PLEASE SEE THE FIREPLACE MANUFACTURER'S INSTALLATION INSTRUCTIONS TO ENSURE THAT ALL CLEARANCE AND INSTALLATION REQUIREMENTS ARE BEING MET.



Notice!!

For field finishing, the following products have been approved for use on this product:


- 1. Lacquer Sherwin Williams "Wood Classics A68F90".
- 2. Paint- Sherwin Williams "Duration Home A98W151 Interior Latex Paint".

All other products may result in discoloration or undesired results.

Warning!!

Improper installation or adjustment can cause injury or property damage. For assistance or additional information, consult a qualified installer, service agency, or the gas supplier.

Comply with all minimum clearances to combustibles as specified in the firebox manual. Failure to comply may cause house fire.

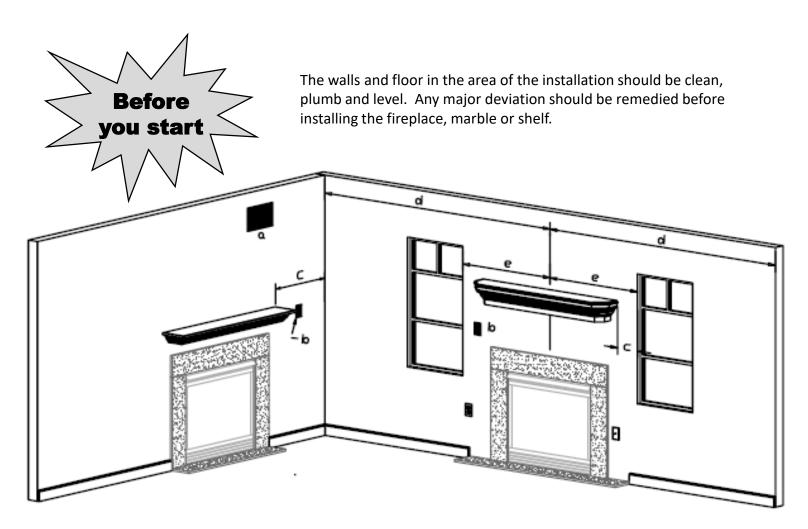

Above is a diagram of issues that may prevent an installation of wood products above the firebox:

- a. Return air vent location?
- b. Where are the electrical outlets or firebox switch?
- c. Is there enough distance between windows and edge of the shelf?
- d. Is the fireplace centered between walls?
- e. Is the fireplace centered between windows?
- f. Confirm clearances to combustibles per the manufacturer's instructions are maintained

Parts List and Diagram

Tools and supplies needed:

- #2 Phillips screwdriver
- Carpenter's level
- Tape measure, pencil
- · Portable drill
- 3/32" drill bit
- Hammer
- Stud finder
- Nail set


MANTEL PARTS:


- 1 Shelf assembly (a)
- 1 Ledger board (b)

(c)

- 3 3.0" Drywall screws
- 2 16D Finishing nails (not shown)

Assembly Steps

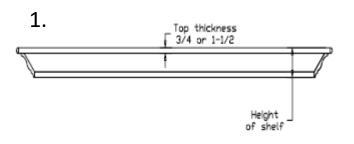

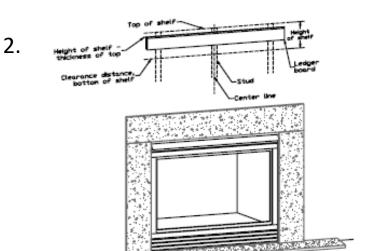

Top thickness Shelf height

Determine what your shelf top and height is for proper placement of the ledger board

Review mantel clearances, found in the installation instructions of your fireplace, to determine the required distance to the bottom of the shelf. Add the shelf height to the distance and mark on the wall. Measure down (thickness of shelf top) and draw a level line approximately three feet long.


Using a stud finder or other method, mark the location of the vertical studs. From the center of the fireplace, mark the center point in which the ledger board needs to be mounted. Attach the ledger board (b) using (3) 3" drywall screws into pre-marked stud locations.










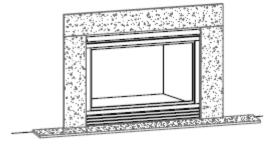

Center and place shelf on the wall with the top resting on the ledger board. Using an electric drill, predrill 3/32" holes down through the top into the ledger board. The holes should be drilled ¾" - 1" off the back edge of the top. Attach the shelf to the ledger board using (3) 16D finishing nails through predrilled holes. Use a nail set to set the nail head below surface of mantel, and fill the resulting hole with an appropriate filler.

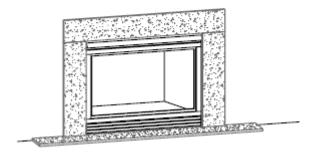

Caulk the shelf to the wall all the way around, using a caulk that matches your shelf color. This will eliminate any remaining gap between mantel and wall.

Your installation is now complete.



Fireside Furnishings, a brand of Hearth & Home Technologies, Inc. www.fireplaces.com

Please contact your Fireside Furnishings dealer with any questions or concerns.

- Notes -
