



Screen Assembly Instructions

Parts Included

Frame x1


Legs x2

Bolts x4

Nuts x4

Step 1

Place Bolts through the Leg and Frame and secure with the Nuts provided. Use supplied Allen wrench to tighten Bolts down.

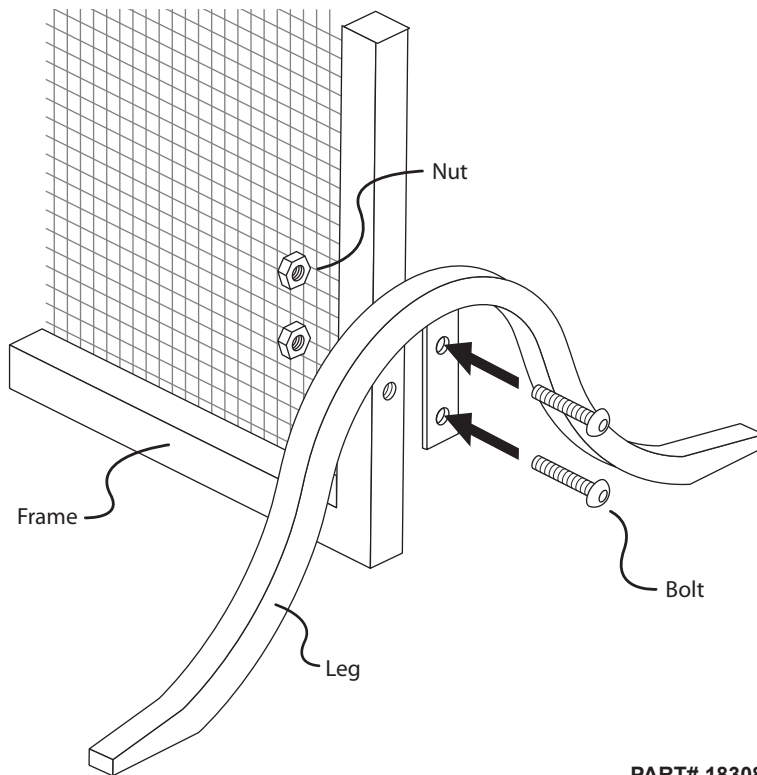

FRONT OF SCREEN FRAME SHOWN IN ILLUSTRATION

PART# 18308
PART# 18309