



Western Star Single Panel Assembly Instructions

Parts Included

Frame x1

Front Leg x2

Back Leg x2

Bolts x4


Nuts x6

Step 1

Place Bolts through Front Leg and the Frame. Secure with the Nuts provided. Use supplied Allen wrench to tighten Bolts down.

Step 2

Align Back Leg to Threaded Stud. Secure with the Nut provided.

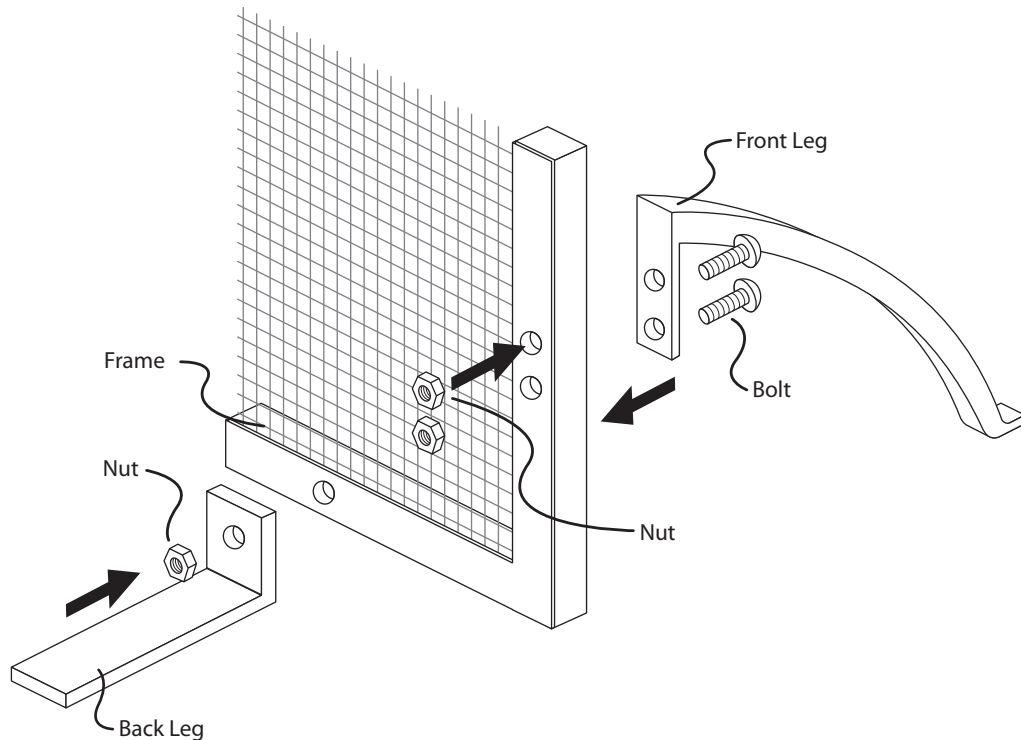

BACK OF SCREEN FRAME SHOWN IN ILLUSTRATION

PART# 18325
PART# 18326