VALLEY OAK LOG PLACEMENT INSTRUCTIONS

CAUTION.....WARNING.....IMPORTANT

USE ONLY A PETERSON REAL FYRE G8E BURNER WITH THIS REAL FYRE LOG SET.





VO8E-20 shown

LOG SET IMPORTANT INFORMATION

This instruction contains log set placement for these Real Fyre logs. You must position and maintain the log layout as shown here to ensure proper operation of the burner system. Incorrect log installation could cause flame impingement and improper combustion, resulting in soot and/or excessive by-products of combustion. DO NOT add any additional embers for this installation. Any additional embers will cause unsafe operation. **Use these logs only with a Peterson G8E burner system**.

If you experience an accumulation of black carbon (soot) on your logs it is an indication of incomplete combustion and you must correct the log placement as instructed in this manual. If significant sooting continues, stop using this gas log set.

Please read these instructions completely and carefully.

Important: Adequate spacing between the logs is NECESSARY and MUST be maintained. If carbon build up (sooting) exists, correct log placement before sooting becomes worse. If any sooting occurs outside of the firebox (i.e. on the walls), turn off unit immediately and contact a qualified professional


service technician.

WARNING: Use ONLY a Peterson Real Fyre G8E burner with this Real Fyre gas log set. Failure to do so may result in property damage or personal injury, and will void listings, certifications, and invalidate claims made to RHP. Contact your local Real Fyre dealer if you need more information.

This product is only warranted when used as part of a Robert H. Peterson Co. unvented burner system.


ROBERT H. PETERSON CO. • 14724 East Proctor Avenue • City of Industry, CA 91746

REV 0 - 1904081335 L-F2-130

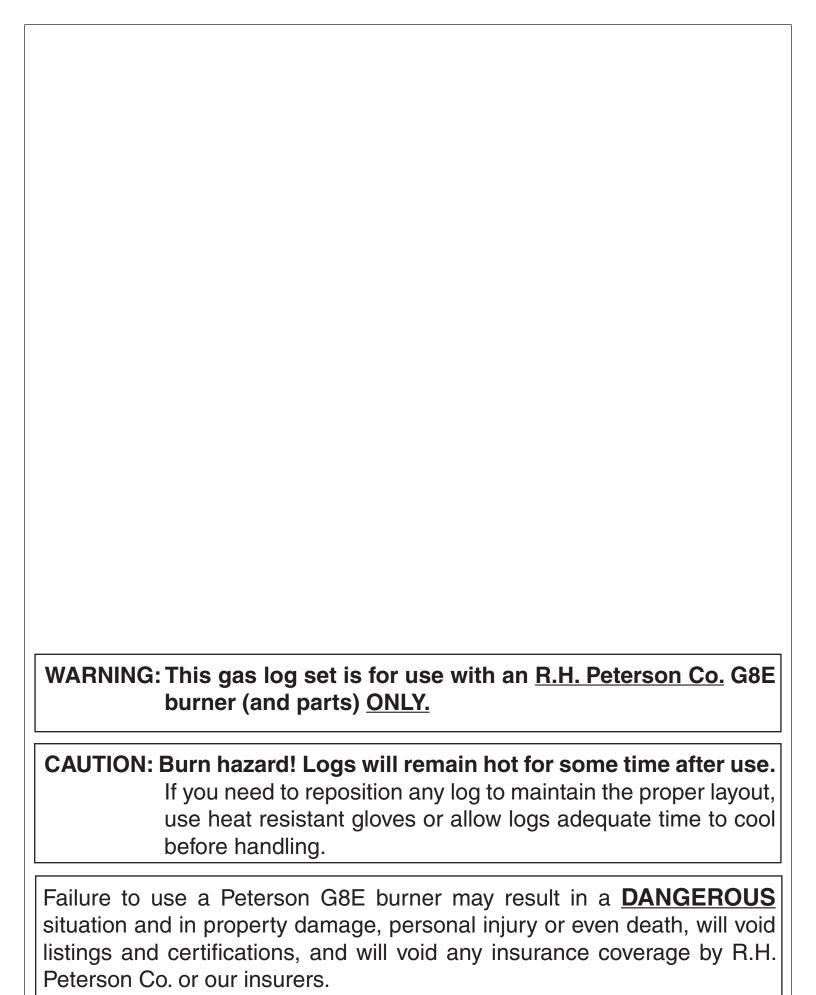

VALLEY OAK LOG PLACEMENT INSTRUCTIONS (16", 20", & 24" MODELS)

The underside of the bottom logs have cutouts and notches that align over the burner. **THE BOTTOM LOGS**<u>MUST</u> BE FULLY SEATED ON THE BURNER. Certain logs have notches on them to allow for the logs to interlock in place.

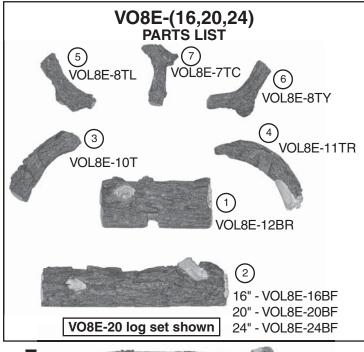

CAUTION: Burn hazard! Logs will remain hot for some time after use.

All items for this log set are included in one (1) box.



Place the <u>rear log</u> (log #1) on the back of the ODS mounting bracket so that the ODS cover fits into the cut-out on the bottom of the log. Slide the rear log forward until it sets into position. **ENSURETHE LOG RESTS FLAT ONTHE BURNER.**



Place the <u>left middle log</u> (log #3) as shown. The log should lock in place over the logs below.

Place the $\underline{\text{right middle log}}$ (log #4) as shown. The log should lock in place over the logs below.



Center the <u>front log</u> (log #2) on the grate. The log has a small bottom-rear notch that aligns onto a tab on the left of the grate for proper positioning. <u>ENSURETHE LOG RESTS FLAT ON</u> **THE BURNER/GRATE.**

VALLEY OAK LOG PLACEMENT INSTRUCTIONS (16", 20", & 24" MODELS) (CONT.)



Place the <u>left top log</u> (log #5) as shown. The log should lock in place over the logs below.

Place the $\underline{\text{right top log}}$ (log #6) as shown. The log should lock in place over the logs below.



Place the <u>center top log</u> (log #7) as shown. The log should lock in place over the logs below.

After setting the logs into position as described above, <u>ensure each is properly and firmly seated</u>. The vent-free gas log set will not function as intended if the logs are not correctly positioned. When placed properly, the flames will not strike any portion of the logs. Periodically check the positioning of all logs to ensure proper log placement and stability. If any flame is striking the logs, recheck log placement. Adjust to conform with instructions. **There should be no flame impingement on the logs**.