
"SICILIAN" FIREPLACE

FA927500TX-IVORY
FA927600TX-BLACK
FA927700TX-MAHOGANY
ASSEMBLY INSTRUCTION

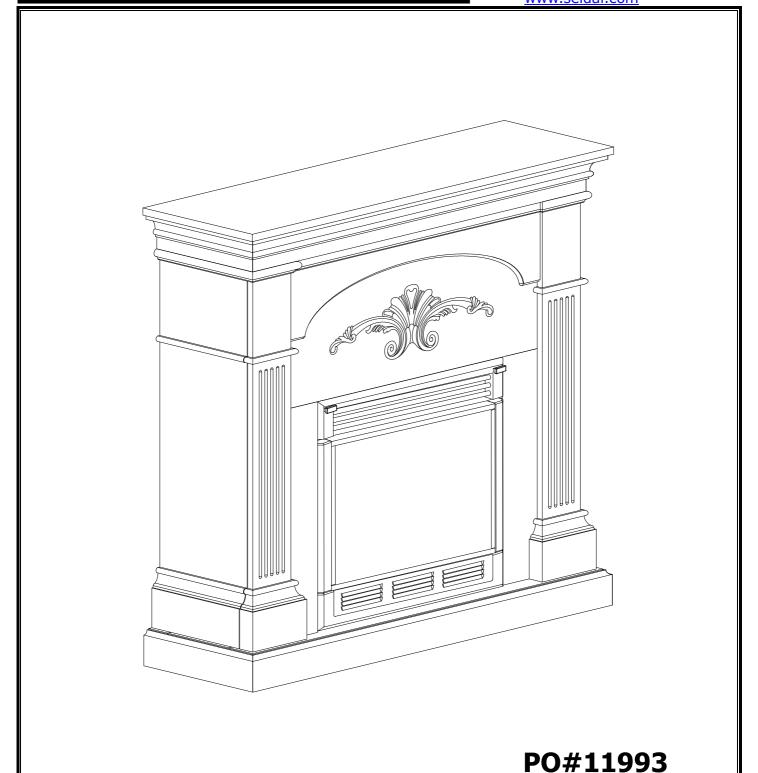

For assistance with assembly contact:
Southern Enterprises Inc.
Customer Service 1-800-633-5096
service@seidal.com
www.seidal.com




"SICILIAN" FIREPLACE

Parts List

Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the


screw diagrams below. You may receive extra hardware with your unit.

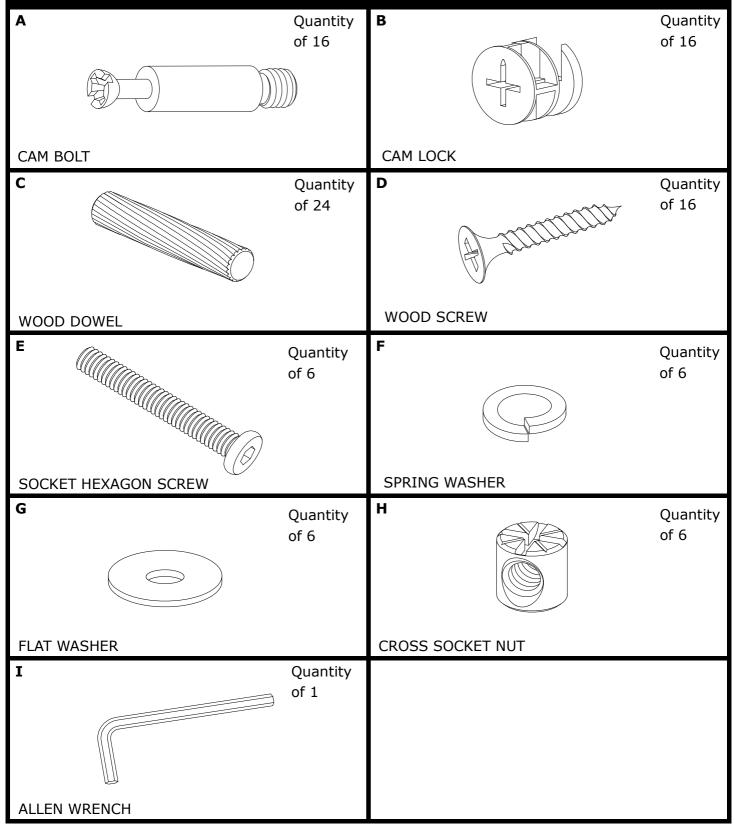

"SICILIAN" FIREPLACE Parts List

Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Using a screw that is too long will cause damage.


Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below. You may receive extra hardware with your unit.

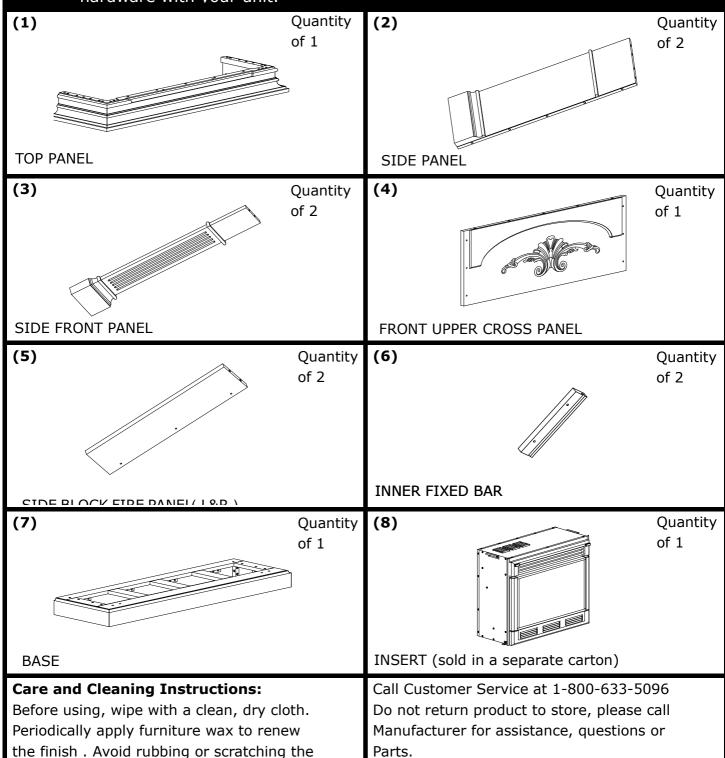

Assembly Tool Required No.2 Phillips Screwdriver (Not Included)

surface with rough or abrasive objects. For replacement parts or questions, please

"SICILIAN" FIREPLACE Assembly Instructions

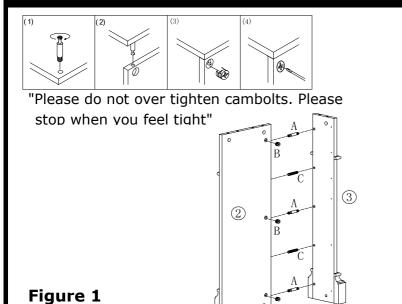


INSERT(A)CAM BOLT &(C)WOOD DOWEL


TO THE RELATED HOLES, THEN USE (B)

CAM LOCK TO CONNECT (2) SIDE

PANEL&(3) SIDE FRONT PANEL.

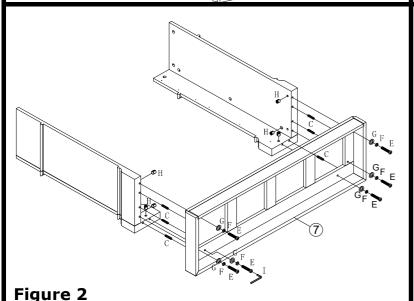


AFTER ASSEMBLED FIGURE 1,INSERT (C) WOOD DOWEL & (H) CROSS SOCKET NUT TO THE RELATED HOLES ,THEN USE (E) SOCKET HEXAGON SCREW THROUGH (F) SPRING WASHER &(G) FLAT WASHER TO CONNECT (7) BASE.

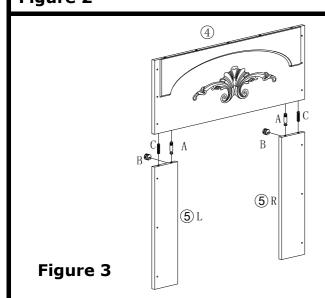


FIRST INSERT (B) CAM LOCK INTO THE RELATED HOLES OF (5) SIDE BLOCK FIRE PANEL, THEN PUSH (A) CAM BOLT & (C) WOOD DOWEL INTO THE RELATED HOLES OF INSERT (A) CAM BOLT & (C) WOOD DOWEL TO THE RELATED HOLES OF (4) FRONT UPPER CROSS PANEL. FINALLY USE SCREWDRIVER TO LOCK TIGHTLY.

"SICILIAN" FIREPLACE Assembly Instructions

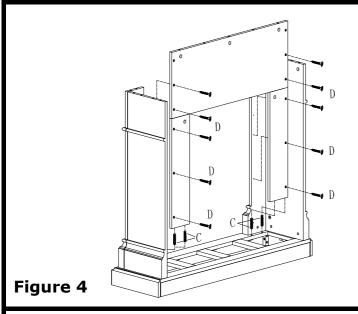

AFTER ASSEMBLED FIGURE 3 ,INSERT (C)WOOD DOWEL TO THE RALATED HOLES OF BASE THEN PUSH THE COMPLETED FIGURE (3) TO THE BACK OF SIDE FRONT PANEL THEN INERT (D)WOOD SCREW TO THE RELATED HOLES TO CONECT (3) SIDE FRONT PANEL.FINALLY USE SCREWDRIVER TO LOCK TIGHTLY.

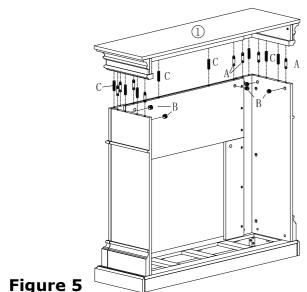


AFTER FINISHED FIGURE 4, INSET (A)

CAM BOLT & (C) WOOD DOWEL INTO THE

RELATED HOLES, THEN INSERT (B) CAM

LOCK TO CONNECT (1) TOP PANEL.

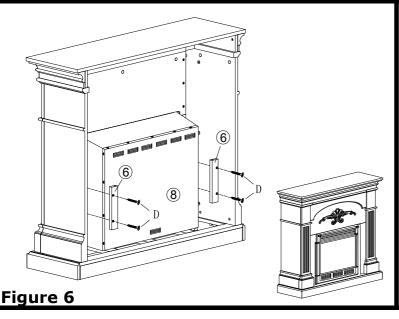

AFTER FINISHED FIGURE 5,THEN INSERT (J) INSERT TO THE RELATED PLACE OF MAIN BODY, THEN INSERT (D) WOOD SCREW TO CONNECT (6) INNER FIXED BAR WITH MAIN BODY. FINALLY USE SCREWDRIWER TO LOCK IT TIGHTLY.

Parts Replacement Form			
Customer Information	1		
Name			
Address			
City/State/Zip Code			
Phone Number			
Please indicate where	you purchased this iter	m: Store/Website/Catalog	
Please indicate color/size/style number:			
Style No	Parts Letter	Parts Description	Quantity Needed

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Customer Service 1-800-633-5096
service@seidal.com
Southern Enterprises, Inc.
600 Freeport Parkway, Suite 200
Coppell, Texas 75019