

Assembly Instructions

Hardware/Parts

Part	Description	Qty
1	Rod	2
2	"U" Bracket	1
3	"L" Bracket	1

Hardware/Tools Not included

Philips Screwdriver

Drill

Drill bit

Sheet Metal Screw(s) - maybe required depending on fireplace

Masonry Screws(s) - maybe required depending on fireplace

Steps

Step 1

Calculate size of fireplace to determine type of rod connection that will be used. Determine type of screws that will be used to connect the brackets to the fireplace, example: sheet metal screws for a metal fireplace, masonry screws/anchors for brick fireplaces.

"L" Bracket – Figure 1 ; "U" Bracket – Figure 2

Step 2

Attach "L" bracket (figure 1b) or "U" bracket (figure 2b) to fireplace using screw(s) determined in Step 1. Drilling maybe required for installation.

Step 3

Insert top of mesh onto rod. See mesh instructions.

Step 4

Insert rod(s) into brackets. See figure 1c and 2c.

Step 5

Connect rod(s) to the fireplace (figure 1a or 2a) using screws determined in Step 1. Drilling maybe required for installation.

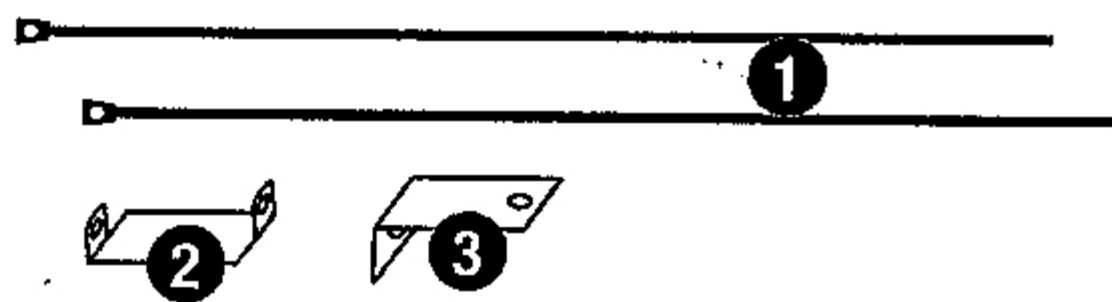


Figure 1: Fireplace - less than 36 in.

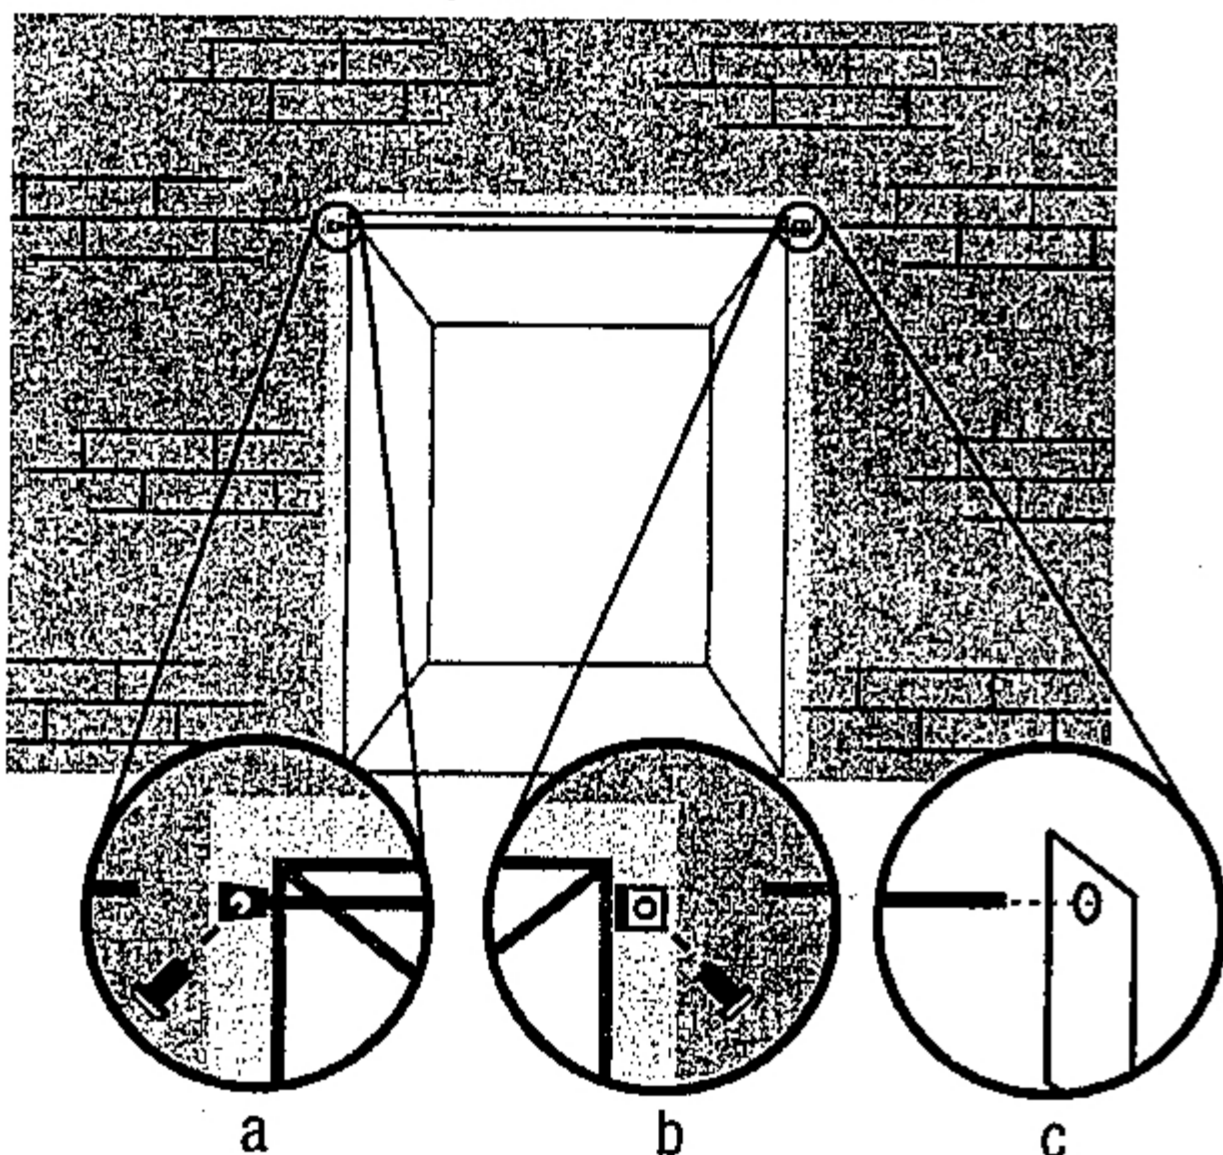


Figure 2: Fireplace - 36 in. and wider

